


Polaroid Now

- A Shutter Button
- B Lens
- C Flash
- D Viewfinder
- E Self-timer & Double Exposure*
- F Film Door Button
- G Flash ON|OFF Button*
- H ON|OFF Button
- I Film Counter LED
- J Neck Strap Loop
- K Battery Level Indicator

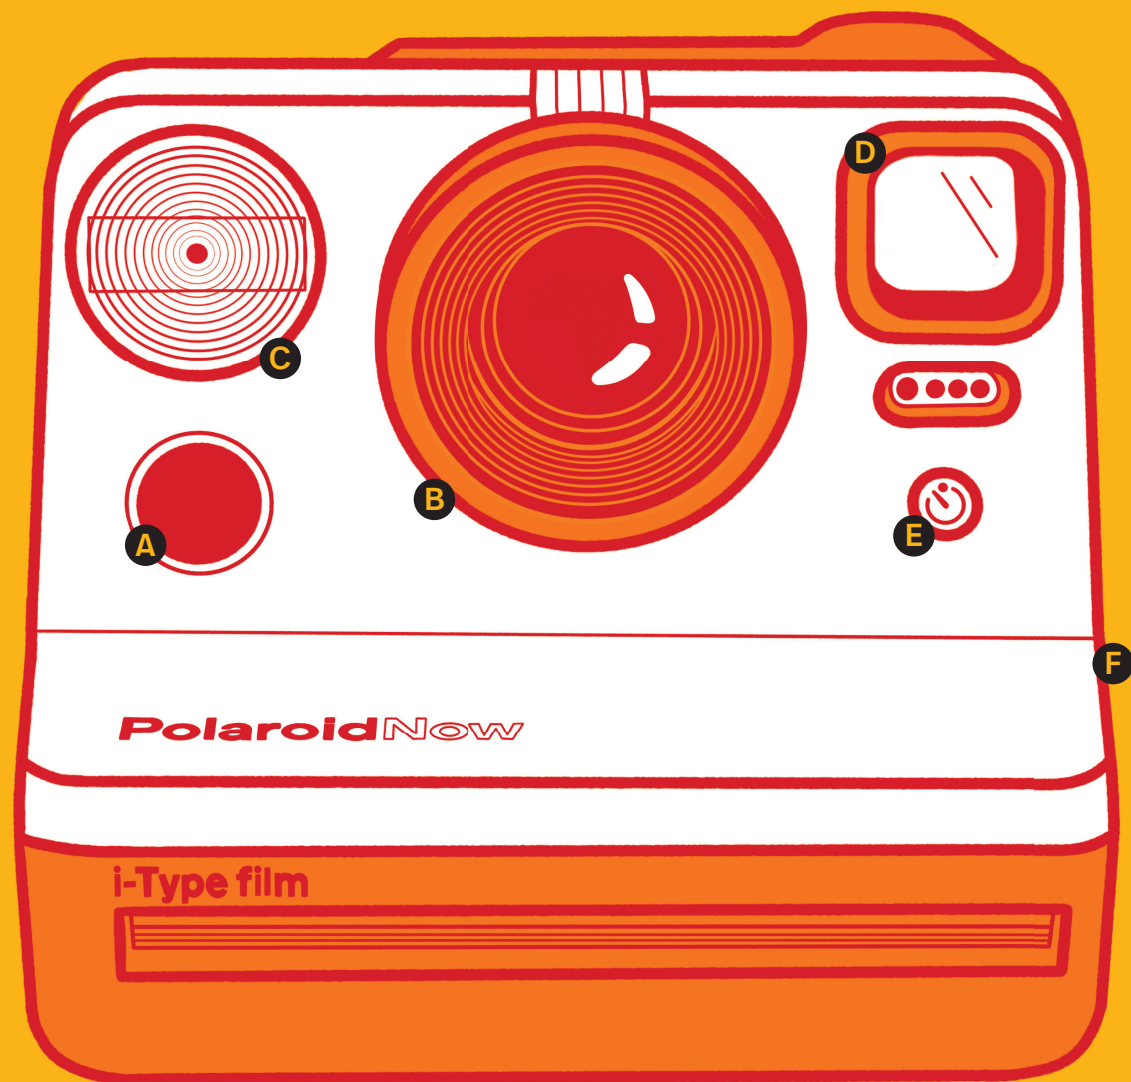

This camera works with

I-TYPE FILM

600 FILM

Have a problem,
or a question you
need answered?

**Contact our
Customer
Support Team**

USA/Canada
usa@polaroid.com
+1-212-219-3254

EU/Rest of World
service@polaroid.com
00800 5770 1500

or visit polaroid.com/help

* Explore more features and download the full manual
at polaroid.com/now-manual

Polaroid, Polaroid Color Spectrum, Polaroid Classic Border Logo and
Polaroid Now are trademarks of PLR IP Holdings, LLC, used under license.

Polaroid Now

- 1 Turn on the Polaroid Now camera by pressing ON/OFF button.
- 2 Open the film door.
- 3 Insert the film pack darkslide up and with the tab facing toward you.
- 4 Close the film door. The darkslide covered by the film shield will eject.
- 5 Remove the darkslide and allow the film shield to roll back in.
- 6 Aim at your subject and press the shutter button. The flash will trigger automatically.
- 7 To shoot without flash, press the flash button before each shot.
- 8 The photo covered by the film shield will eject.
- 9 Don't shake the photo! Place your photo in a dark place or face down on a flat surface.

i-Type Camera

Quick Start Guide

