


## Touchpad Gestures

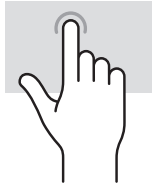


Tap to select



Pinch to zoom out



Tap to right-click

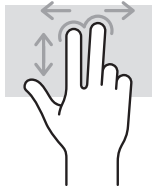

Slide to Navigate



Multi-featured gesture




Multi-featured gesture

## We are here to help

If you need assistance with your device, our UK based Support Team are ready to help. Contact us by scanning the QR code with your smartphone camera or online at:

[geo-computers.com/support](http://geo-computers.com/support)

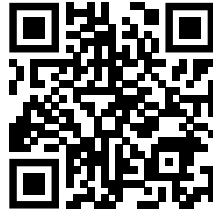

## 12 Month Warranty

This GeoBook comes with a 12 month Return To Base Warranty from the date of purchase.

For more information please visit:

[geo-computers.com/warranty/infinity](http://geo-computers.com/warranty/infinity)

Tel: 01282 227086

## Declarations

### EC Declaration of Conformity

Geo Computers declares that GeoBook complies with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Geo Computers, Building 1, Olympic Park, Olympic Way, Warrington, Cheshire WA2 0YL.

### Disclaimer

Tactus Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Furthermore, Tactus Limited reserves the right to revise this, or any other publication, and to occasionally make changes to the contents without the obligation of Tactus Limited to notify any person or organisation of such revision or changes.

### Disposal of Waste Electrical & Electronic Equipment (WEEE)

This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead, it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more information about the recycling of this product, please contact your local council, your household waste disposal service, or the reseller you purchased this product from.

## Safety Information

### Audio Warning

Listening at a high volume for a long time may damage your hearing.

### Battery and Charger Safety

To unplug a charger or an accessory, hold and pull the plug, not the cord. Unplug your charger when it is not in use. If your Device is left unused on standby, a fully charged battery will still lose charge over time.

Always keep the battery between 59°F & 77°F (15°C & 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A GeoBook with a hot or cold battery may not work temporarily.

**Do not** dispose of batteries in a fire as they may explode. Obey local regulations and recycle when possible.

**Do not** dispose as household waste.

**Do not** dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let the liquid touch your skin or eyes. If this happens, immediately flush the affected areas with water and seek medical help.

**Do not** modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazards, and may invalidate any approval of warranty.

**Do not** attempt to replace the Battery. The Batteries in this device are not replaceable. Geo recommends that you seek professional assistance for all device repairs. Opening and/or repairing your device can present electric shock, device damage, fire, and personal injury risks, and will invalidate your warranty.

**Do not** charge your Geo during a lightning storm. Only use the charger supplied with this device. Never use a damaged battery or charger.




Intel Inside, Intel Inside logo are trademarks of Intel Corporation in the U.S and/or other countries. ©Tactus 2021. All rights reserved. ©Microsoft Corporation. 'GEO' & 'GEO logos' and 'Infinity' logos are registered trademarks of Tactus Limited. Due to the company's policy of constant improvement and refinement, the company reserves the right to alter specification. All trademarks and copyrights are used for reference purposes only and are the property of their respective owners. Designed in the UK. Made in China. ©Tactus 2021. Tactus Limited, Building 1, Olympic Way, Warrington WA2 0YL. [geo-computers.com](http://geo-computers.com)

## Quick Start Guide

# INFINITY

GEOBOOK 340 • 14.1" LAPTOP

[GEO-COMPUTERS.COM](http://GEO-COMPUTERS.COM)

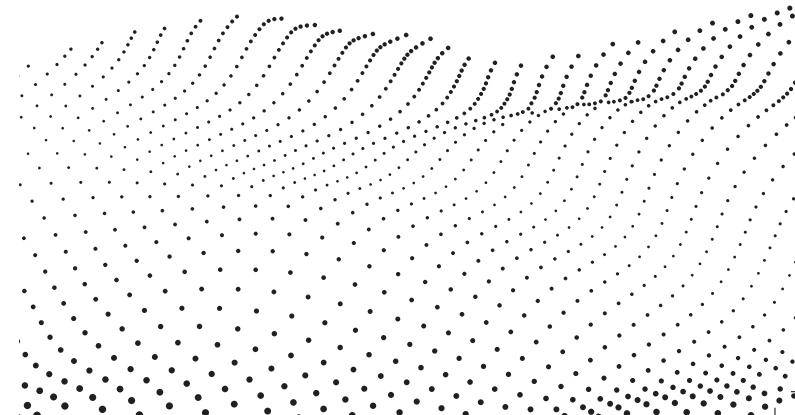


## What's in the box


- Infinity GeoBook 340 ■ Power adapter
- USB Type-C Charger ■ Quick start user guide

## Quick set-up


When using for the first time, plug into mains electricity supply using power adapter/cable supplied and charge until full.

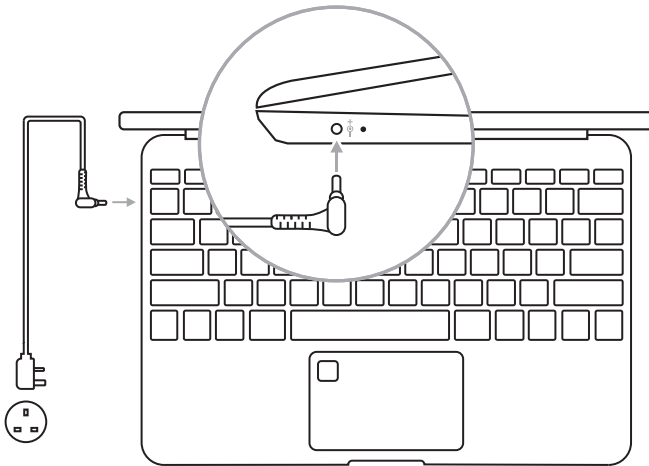

## Features

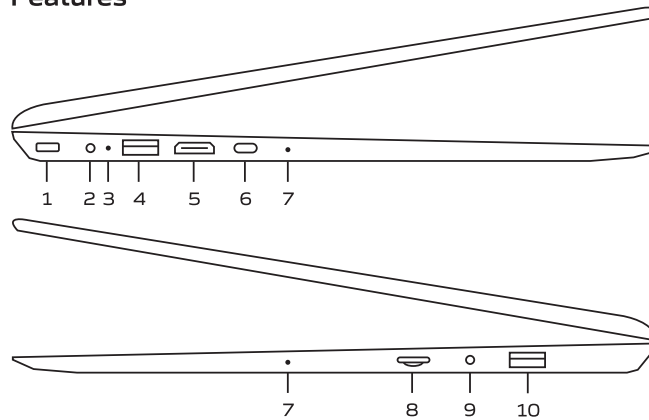


- |                          |                    |
|--------------------------|--------------------|
| 1. Kensington lock slot  | 6. USB Type-C port |
| 2. DC in power connector | 7. Microphones     |
| 3. Charging light        | 8. Micro SD slot   |
| 4. USB 3.0 port          | 9. Headphones port |
| 5. HDMI port             | 10. USB 3.0 port   |

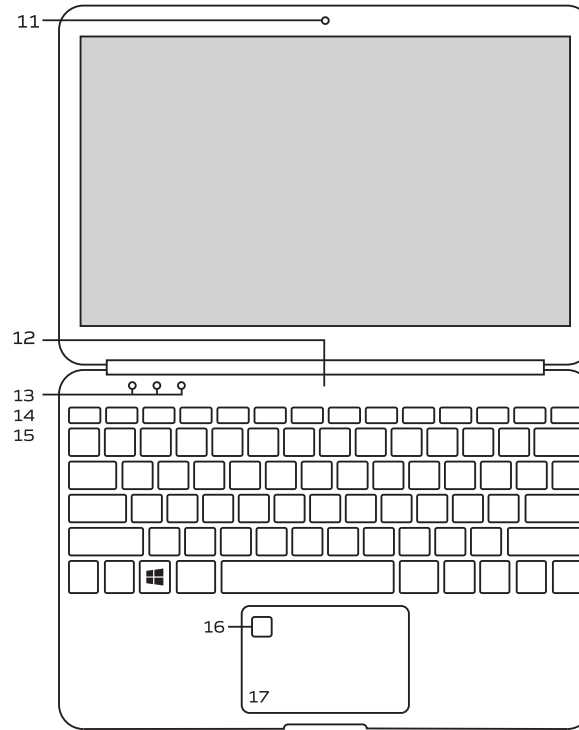

- |                     |                        |
|---------------------|------------------------|
| 11. Camera          | 15. Number lock light  |
| 12. Speakers        | 16. Fingerprint reader |
| 13. Power light     | 17. Precision touchpad |
| 14. Caps lock light |                        |

Added privacy and security with fingerprint activation

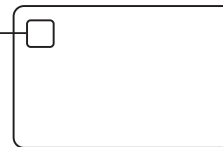

**Need help with set up?**  
Contact our support team at [geo-computers.com/support](http://geo-computers.com/support)

## Windows 10 start screen

Access your favourite Windows Store Apps, send/receive emails, browse the web, stream videos and view photos all from one central location.



Note: All pictures and illustrations are for reference only and may vary from the final product.

## Get started

**Display the Start menu:** Select the Start button in the lower-left corner of the taskbar and easily find your favourite Apps, settings and files.

**Search:** In the taskbar search box, begin typing the name of an App, setting, file or internet topic.

**Browse the web:** Microsoft Edge gives you new ways to find stuff, manage your tabs, read e-books and write on the web. To get going, select Microsoft Edge on the Windows taskbar.

**Shut down your computer:** Select the Start button, select the power icon, then select shut down.

**Connect to a wireless network:** Select the network icon in the lower-right corner of the taskbar and select one of the available networks.

**Need more help?** To access help topics, select the Start button, and then select the Get Started App.